


Settings



Click on Settings from main screen, then click on System.

System

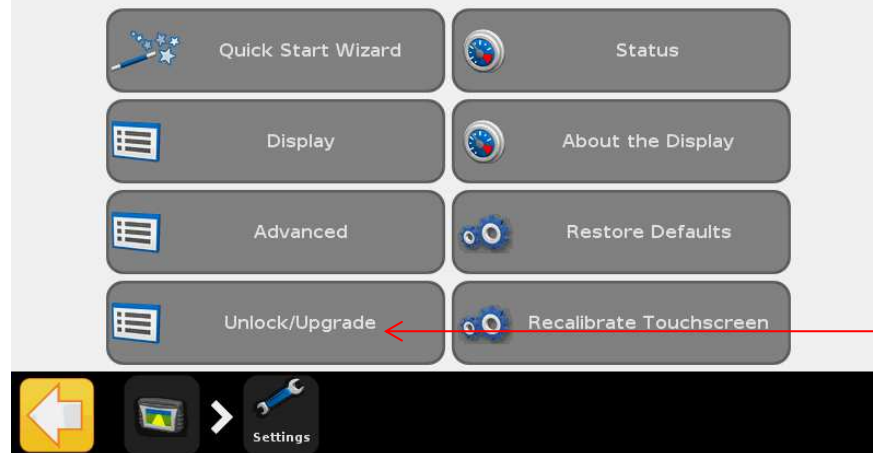

Click on Unlock / Upgrade

Unlock/Upgrade



Click on Password Upgrade



Password Upgrade



This wizard will take you through a password upgrade. If you wish to add features and do not have a password, contact your local reseller.

Before upgrading display:

- Send all field data and configuration to USB
- If using RangePoint or CenterPoint RTX via satellite, write down the settings
- Disconnect ALL external devices

Once the upgrade begins, it cannot be interrupted. Do not remove power during the upgrade.

Press the green arrow to proceed or the red X to cancel.




Click on Green Arrow

Enter password




Enter password exactly as it appears. All capitals in password must be capital letters. All dashes and numbers must be exact. Hit Green Arrow when done.


Settings

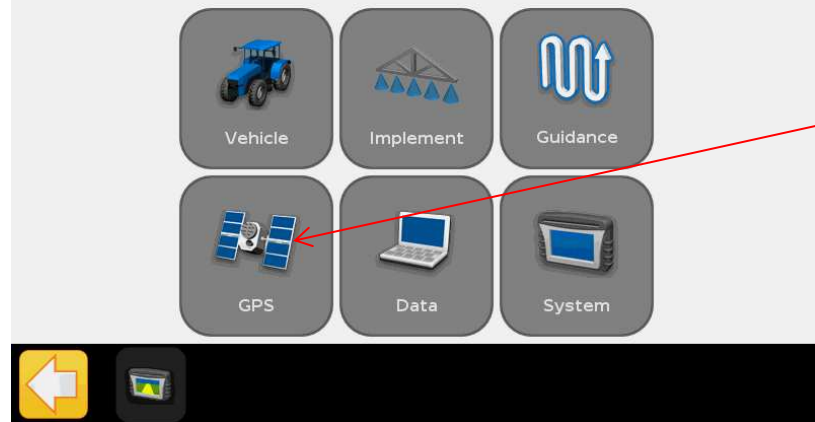

Click on Settings from main screen, then click on GPS.

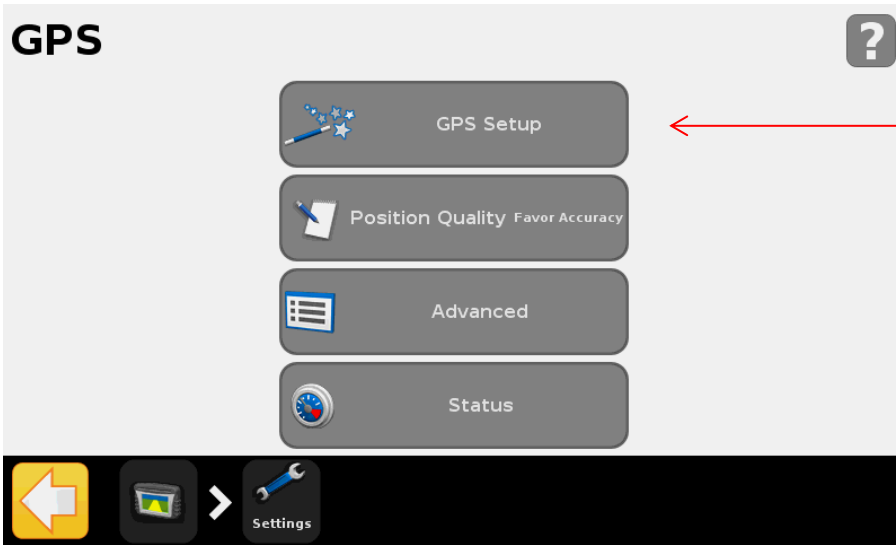

Click on GPS Setup.

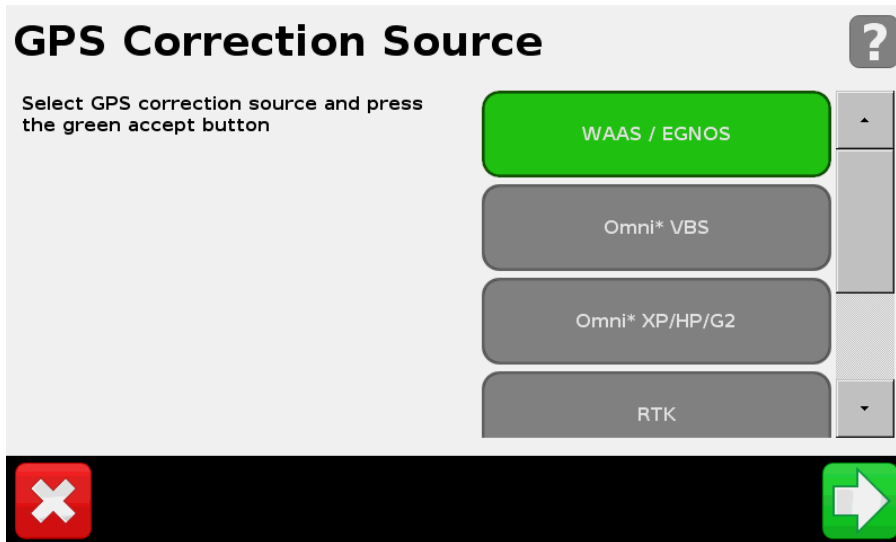

Click on RangePoint RTX in list of correction sources. Continue to click green arrow to accept settings until the Settings screen appears.

Select Appropriate Satellite, Central North America for Sask.

- When receiving satellite signals, you must select the frequency and baud rate based on your specific
- region:
- • **Western North America (RTX WN): 1557.8615 MHz at 600 baud**
- • Central North America (RTX CN): 1557.8150 MHz at 2400 baud
- • Eastern North America (RTX EN): 1557.8590 MHz at 600 baud
- • South/Central America (RTX SA): 1539.8325 MHz at 600 baud
- • Europe/Africa (RTX EA): 1539.9525 MHz at 600 baud
- • Asia Pacific (RTX AP): 1539.8325 MHz at 600 baud
- ***Note – These frequencies do change occasionally. If you experience issues with the satellite signal,***
- ***contact your Reseller for updated satellite information***